




1. Connect battery and start up. Turn on Inverter and check the battery port voltage by multimeter. And then, connect the communicate cable between PC and inverter, send the command as below. If the response is (ACK, that is meaning inverter accepts the command, otherwise, please send the command again.

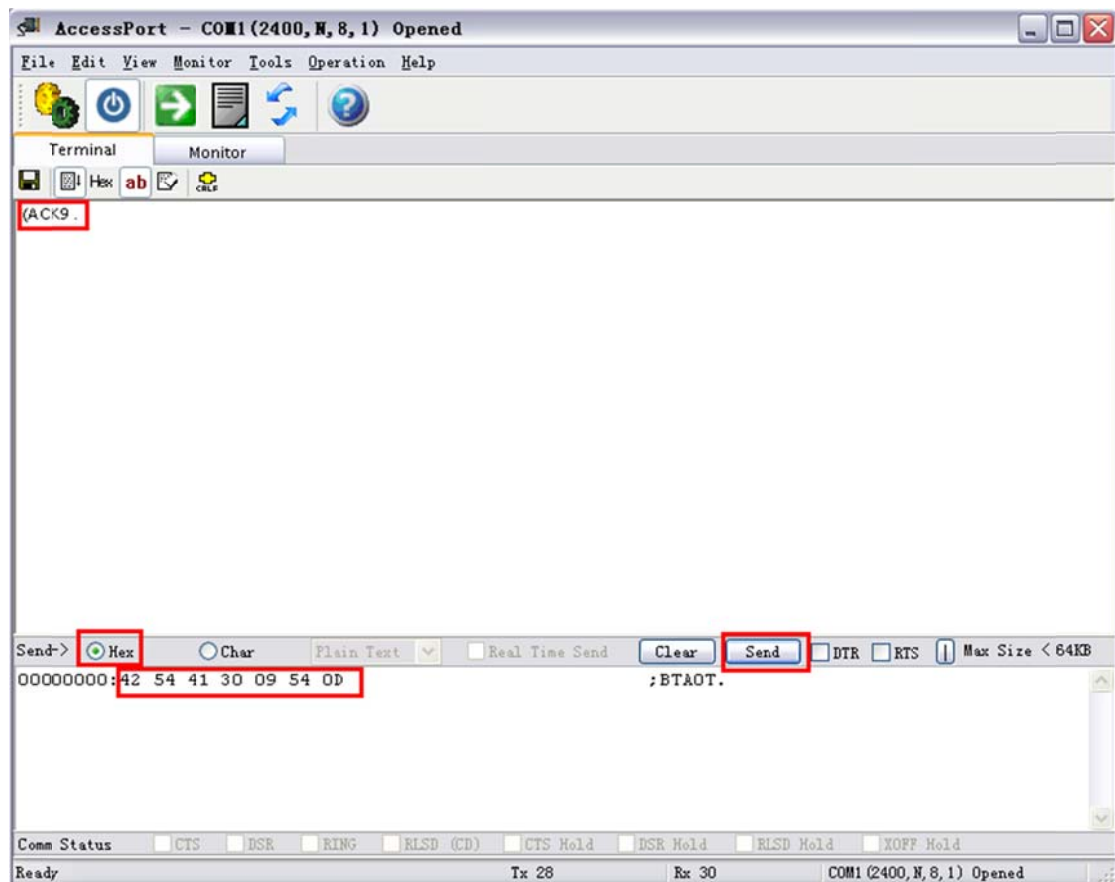

2. If the value show in LCD is less than real voltage, send the command as below.

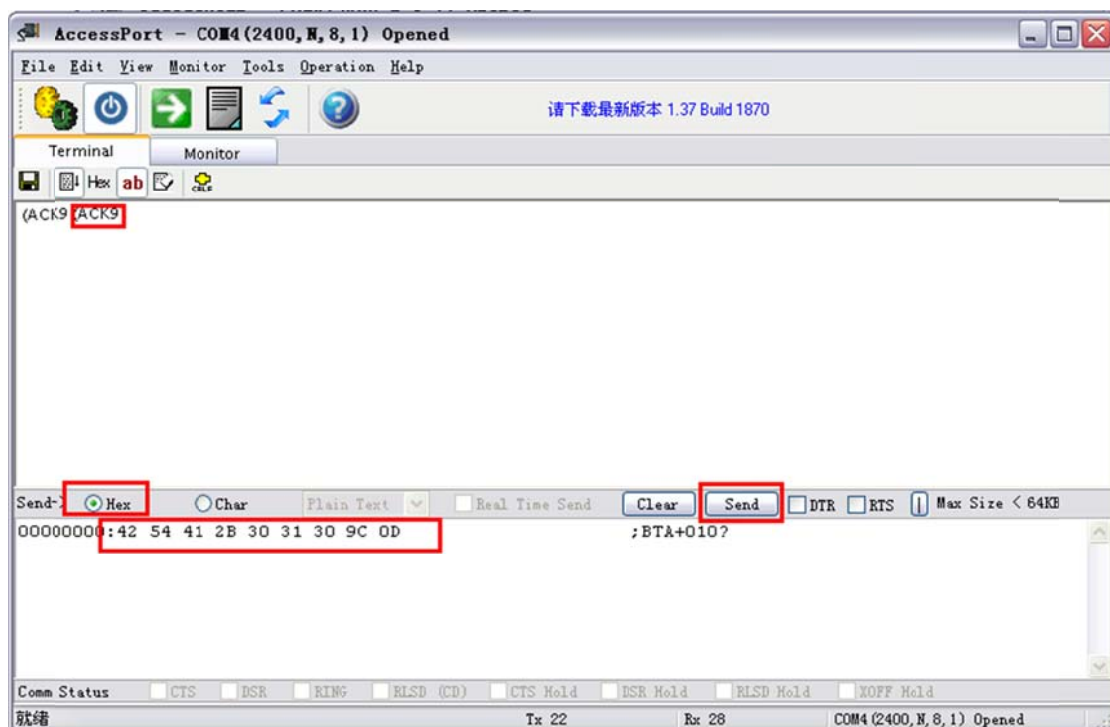

3. If the value show in LCD is higher than real voltage, send the command as below.

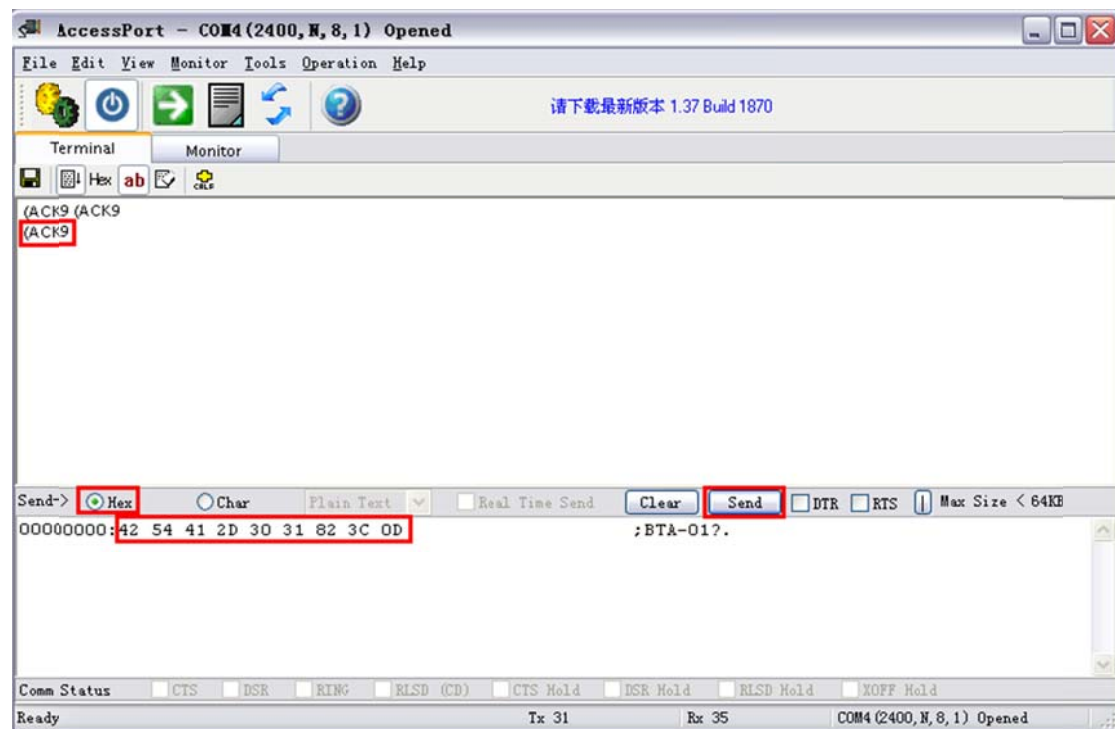

4. Repeat the above steps, till the value show in LCD is accurate. Then, send command to save the value as below.

