


MUST PV18 Pro and MUSTLiFePo4 Communication Guide Line

1. Connect the Communication Cable (Concern about the PIN Code as below)

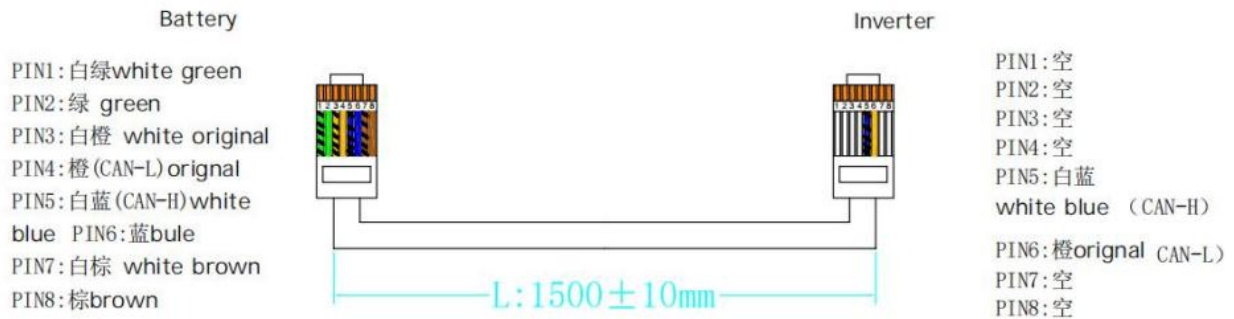


2. Lithium battery address DIP code: 1



3. Turn on Lithium Battery Power and the Inverter

Setting PV18PRO Inverter LCD Processing as below:

* **Setting Battery Type** 【14】 Li

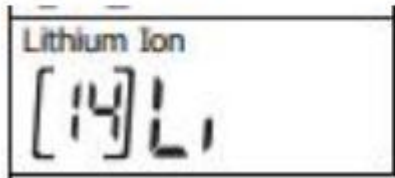

4.If the setting parameter has 41 options, select 0. If the setting parameter does not have 41 options, you do not need to select them

***Setting Lithium Battery Protocol** 【41】 0 (number 0 is the code representative of MUST battery) .

5.Turn off the inverter and battery power.

6.Turn on the battery power and inverter switches.

Remark:

A.If communication success will show battery Volt/Amp/SOC/Temperature

If no communication,screen no Battery data.

B.the voltage and protocol number setting on user manual is for refer. When install should according to different battery data sheet.