


2 . Battery Module (US2000 Plus/US3000) Front Interface

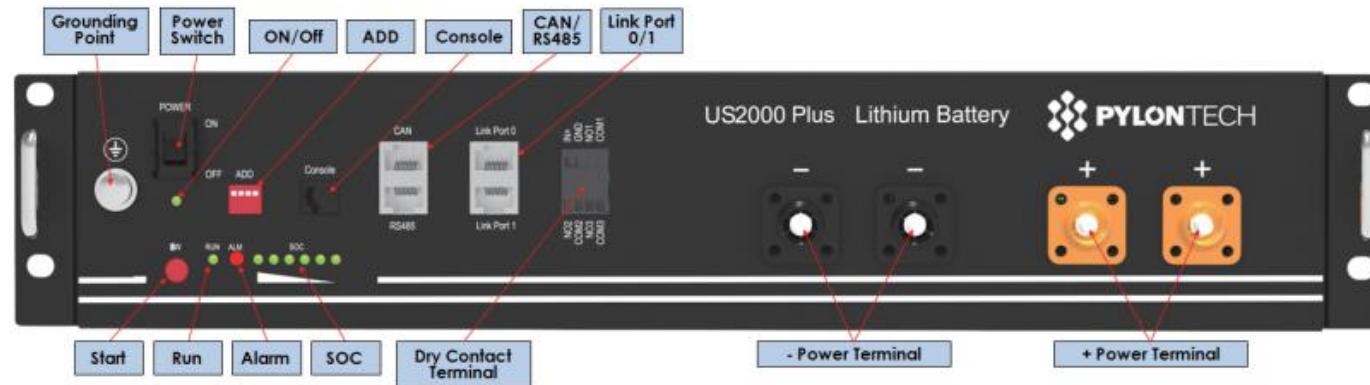

Power Terminal connect to VMIII/KING 10 port .


Battery input.

RS485 port connect to VMIII 15 port/KING 17 port.

BMS Communication port: RS485

Definition of RJ45 Port Pin (Battery side)

No.	RS485 Pin
1	--
2	--
3	--
4	--
5	--
6	GND
7	RS485A
8	RS485B

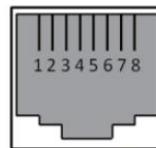

RJ45 Port



RJ45 Plug

Definition of RJ45 Port Pin (Inverter side)

No.	RS485Pin
1	--
2	--
3	RS485B
4	--
5	RS485A
6	--
7	--
8	--